

INSTALLATION INSTRUCTIONS FOR STANDARD POST MOUNTED & WALL MOUNTED GAS LAMPS

INSTALLER:

Please
Leave These
Instructions with
Homeowner for Future
Reference!

Installation & Servicing of this Gas Light should be done by a qualified service technician or plumber.

CLEARANCES TO COMBUSTIBLES MUST BE MAINTAINED!

Top of light should not be less than 18" to any combustible material & 18" from either side. Keep away from gasolines and other flammable vapors.

Gas Lights Are Hot While In Operation!

Always turn gas lamp OFF, allow to cool, and use caution when cleaning or servicing any part of this gas light.

NOTE: ALL INSTALLATIONS SHOULD CONFORM TO LOCAL PLUMBING CODES & GUIDELINES. THE FOLLOWING INSTRUCTIONS ARE GENERAL IN NATURE.

INSTALLATION OF STANDARD WALL MOUNTED GAS LAMP

Most gas lights are stubbed out with 1/4" copper fittings.

Position gas light wall bracket over gas stubout and mark holes for mounting. Please note that not all gas lights cover the gas stub out. The gas connection may be below or to the side of gas light.

Attaching the wall mount bracket to the wall. Hardware required will depend on type of wall surface. Installation of the bracket on a brick or masonry wall will require drilling holes into the masonry and installing lead anchors. The use of masonry screws, such as TAPCON brand, makes for an easy installation. Be aware of the weight of the gas lamp fixture when mounting on Drywall or Stucco.

Installation of the wall mount bracket to a wood or Stucco wall is usually done with a lag bolt, depending on the weight of the light vs. wall strength.

Connect the supply line to the 1/4" connection on gas lamp. Any fittings necessary to connect the gas line will depend on the type of line stubbed out of wall. Be careful not to crimp gas line when attaching lamp to wall.

Turn on gas to light.

**ALWAYS leak test all fittings before proceeding using a soap & water solution.
NEVER use a match or lighter to check for a leak!**

Align wall mount bracket with mounting holes in wall and secure.

INSTALLATION OF STANDARD POST MOUNTED GAS LAMP

Use P99 in-ground post

Dig post hole approximately 8" round by 24" deep.

If not already furnished, place 1/4" copper tubing in post with at least 3 coils at top of post. This is commonly called a "pigtail" and can be ordered, Part # CI505. The end of the tubing should come out of the existing slot in post approx. 18" up from bottom of post.

Attach the lamp head to the copper tubing. Slowly lower lamp onto post. Take care not to bend or crimp tubing. Check to be sure slot on top of post line up with valve access hole on collar of gas light.

Connect gas supply line to copper pigtail of gas light.

Turn on gas to light.

ALWAYS leak test all fittings before proceeding using a soap & water solution. NEVER use a match!

RELIGHTING OPEN FLAME LIGHTS

Open flame gas lights WILL occasionally blow-out.

Under certain conditions, such as inclement weather, or if light is installed in a windy environment, such as on a lake, between 2 buildings, or on a breeze way, a funnel effect is created which can blow out a gas light.

To relight gas lamp, simply open door of the light and place a match or lighter near burner tip. If this is an ongoing problem a chimney can be installed in light, some are already equipped with one. Adjusting the flame height can also minimize the chances of light blowing out. Please note that if flame is too high sooting may result. In this case, simply lower the height of the flame with the gas control valve.

GASLITE AMERICA WEST

www.gaslights.com

281-376-5200 phone

281-251-1313 fax

Open Flame Gaslight Operation Instructions

After your open flame gaslight has been properly installed, you may now light it:

1. Open the door of the light or remove one glass pane.
2. The control valve may be either a hand-valve or a screw-slot valve. Either way, if the handle or slot is running the same direction as the line, the valve is open. If the handle or slot is running across the line, it is closed. Open the gas valve approximately half-way to light.
3. Immediately place a lit match near the burner tip of the light. The light should then start up and you should see a small flame at the burner tip.
4. Close the door to the light and make final adjustments to the flame with the gas valve. Most flame heights are approximately 2" tall. The maximum height is 3" in larger lights.
5. Occasionally your open flame light may blow out. This is normal. Simply turn off the gas valve, open the door, wait 3 minutes and relight your light as above.

This gaslight is designed for operation on natural gas and contains orifice #76 which is rated at approximately 1436 BTU's per hour at 7" water column.

Occasionally it may be necessary to clean out the slot in your burner tip, if you begin to see soot build-up inside your light. This is a simple procedure by turning off the light and using a razor blade to clean out the burner tip.

If you should have any other questions or need further assistance, please call us. Thank you for your purchase.



PO Box 12249
Spring, Texas 77391-2249
www.gaslights.com
281-376-5200 phone
281-251-1313 fax

Open Flame Gaslight with GLSS01 Safety Shut off Operation Instructions

After your open flame gaslight has been properly installed, you may now light it:

1. Open the door of the light or remove a glass pane.
2. The control valve may be either a hand-valve or a screw-slot valve. Either way, if the handle or slot is running the same direction as the line, the valve is open. If the handle or slot is running across the line, it is closed. Open the gas valve all the way.
1. Depress the brass button near the burner and hold it down.
2. Immediately place a lit match near the burner tip of the light. The light should then start up and you should see a small flame at the burner tip.
3. Continue to hold down the brass button for one minute while the thermo couple tip heats up.
4. Release the button slowly. If the light goes out, move the tip of the sensor closer to the burner tip flame and repeat the instructions from #2 above. If light stays lit, proceed to #7.
5. Close the door or replace pane and make final adjustments to the flame with the gas valve. Most flame heights are approximately 2" tall. The maximum height is 3" in larger lights.
6. Occasionally your open flame light may blow out. This is normal. Simply turn off the gas supply valve, open the door, wait 3 minutes and relight your light as above.

This gaslight is designed for operation on natural gas and contains orifice #76 which is rated at approximately 1436 BTU's per hour at 6.3" water column.

Occasionally it may be necessary to clean out the slot in your burner tip, if you begin to see soot build-up inside your light. This is a simple procedure by turning off the light and using a razor blade to clean out the burner tip.

If you should have any other questions or need further assistance, please call us.
Thank you for your purchase.



PO Box 12249
Spring, Texas 77391-2249
www.gaslights.com
281-376-5200 phone